

# AirSense™

Designed In California By iBaby



**Quick Start Guide**  
 Guide de démarrage rapide  
 Guida rapida di avvio

iOS  
 Android

## Includes

- 1 AirSense
- 1 Travel Pouch
- 1 Power Adapter
- 1 Quick Start Guide

## Getting Started

What you need to get started:

- 1** AirSense  

- 2** Power Adapter  


- 3** Your Wi-Fi Router/Modem (not included)  

- 4** Your Smart Device (not included)  


## Installing Your AirSense


### Step 1

- Verify that your smart device is connected to a Wi-Fi network. Your router must provide Wi-Fi connection for Internet access.




### Step 2

- Connect the power adapter to the back of your AirSense & press the power button on the top. You will see a soft **PINK** light flashing.

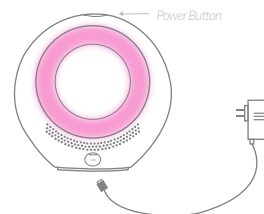

### Step 3

- Wait for a **BLUE** light to start flashing.  
*Note: if you do not wait for the light change, the installation might be unsuccessful.*

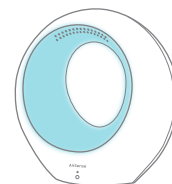

### Step 4

- From App Store or Google Play, download the **iBaby Care** App onto your supported device and launch the app.



Download on the App Store



GET IT ON Google play

### Step 5

- Open the app & follow the in-app instructions to install your AirSense successfully.

## Installation Indicators

- If the installation fails, you will see an **ORANGE** light flashing to alert you. Check your Wi-Fi.
- When the installation starts, the **BLUE** light will start rotating.
- Once the installation is completed, your AirSense will turn to a default air indicator light:  
 Superb (0 - 25)      Poor (25 - 50)  
 Oops (50 - 75)      Alert (75 - 100)  
*\* Refer to the in-app Reading Guide for more information.*

For questions, contact us at

iBaby Labs, Inc  
 780 Montague Expy, Ste 601  
 San Jose, CA USA

+1 (650) 396-2436  
 support@ibabylabs.com  
 www.ibabylabs.com

## Get to Know Your AirSense

